


JWT OIL PAN SPACER KIT VQ35HR / VQ37

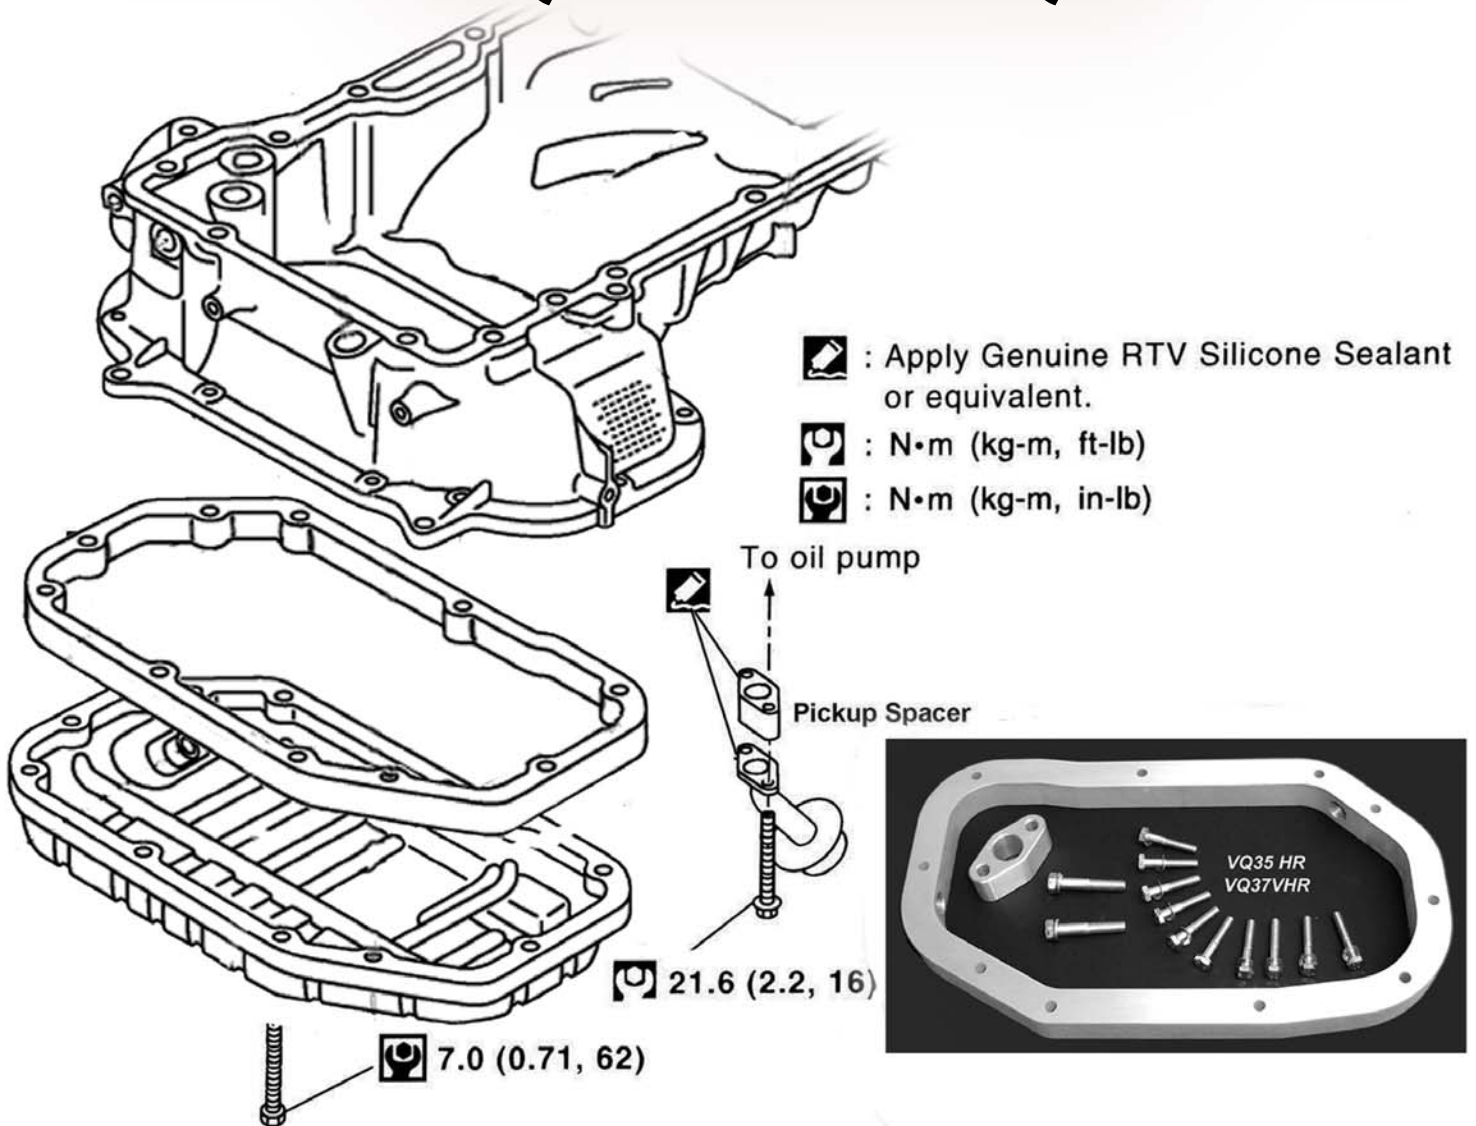

1. Drain oil and remove the sub-pan. Use a thin putty knife to separate the sealing surfaces.
2. Remove the oil pickup tube and reinstall it with the supplied spacer and bolts as shown. Do not get excess sealant inside the pickup tube.
3. Install the pan spacer and supplied longer bolts using RTV Sealant as shown.
4. Allow the sealant to dry for at least 30 min. before filling oil.
5. Oil capacity is now 6 quarts (original was 5 qt w/ oil filter change).