



90+ 300ZX TWIN TURBO BOOST SOLENOID MANUAL CONTROL SWITCH WIRING DIAGRAM

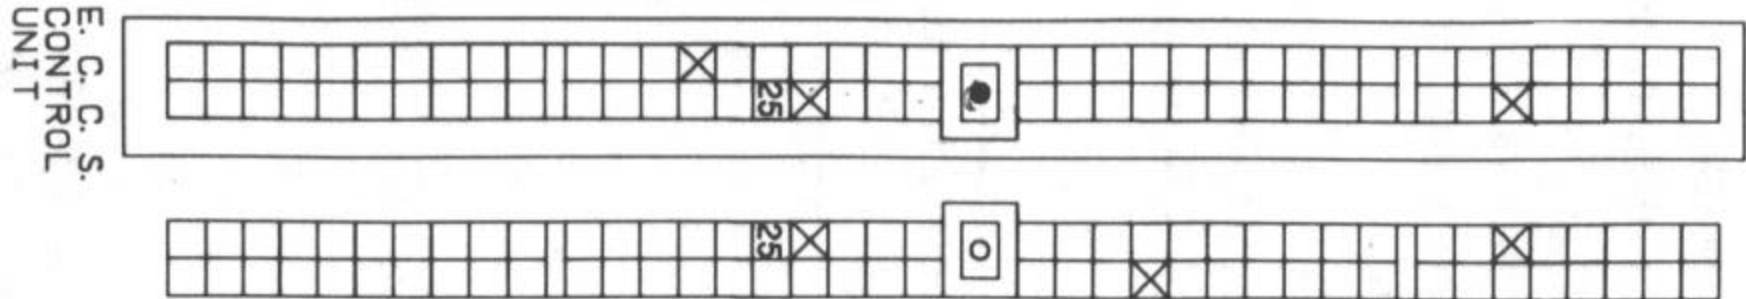

**THIS SKY BLUE WIRE IS THE GROUND SIGNAL FROM ECU
NO GROUND = LOW BOOST OR SOL. OFF
GROUNDED=NORMAL BOOST OR SOL. ON**

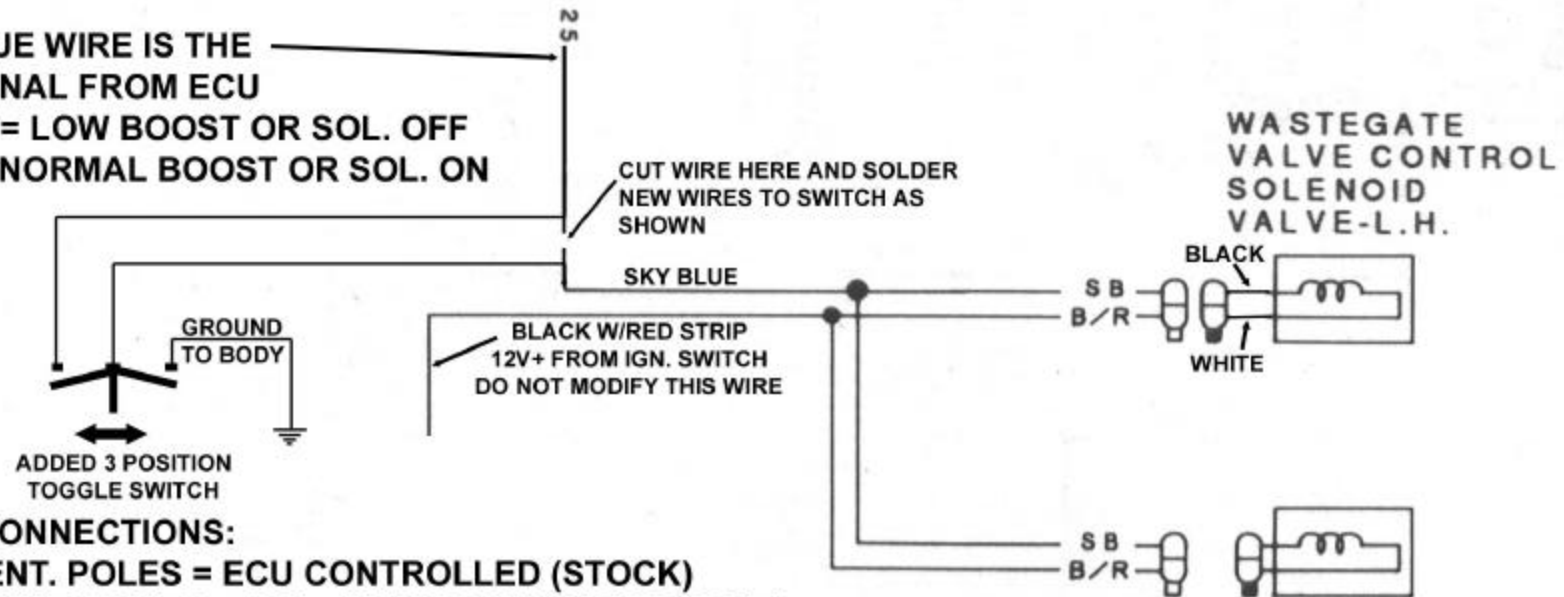

SWITCH CONNECTIONS:
 LEFT & CENT. POLES = ECU CONTROLLED (STOCK)
 RIGHT & CENT. POLES = SOL. ALWAYS ON (HIGH BOOST)
 OPEN (NO CONNECT) = SOL. ALWAYS OFF (LOW BOOST)

**NOTE: IF SWITCHING IS NOT NEEDED
 THE S/B BLUE WIRE TO THE SOLENOIDS
 CAN BE WIRED DIRECTLY TO BODY GROUND
 TO PERMANENTLY ELIMINATE THE LOW BOOST MODE.**